



Max airspeed 250 KIAS below FL100

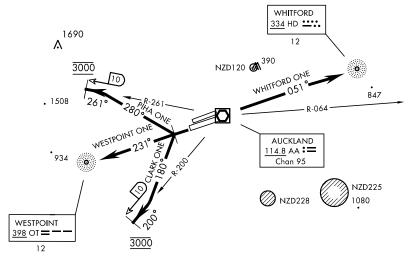

Avoid sector AA VOR R-002 through R-024 3 to 5 DME below 2200 ft.

Southbound flights cross AA VOR R-064 at or above 5000 ft.



V

DEPARTURE ROUTE DESCRIPTION

TAKE-OFF RWY 05R:

WHITFORD ONE DEPARTURE: Track to HD NDB and intercept assigned route or as directed by ATC.

OCEANIC TRANSITION: At HD NDB intecept assigned route by most direct turn or as directed by ATC. Maintain FL140 until AA VOR 70 DME, the climb and maintain FL250. Expect higher at AA VOR 200 DME.

TAKE-OFF RWY 23L:

WESTPOINT ONE DEPARTURE: Track to OT NDB and intercept assigned route or as directed by ATC.

OCEANIC TRANSITION: At OT NDB intecept assigned route by most direct turn or as directed by ATC. Maintain FL140 until AA VOR 70 DME, the climb and maintain FL250. Expect higher at AA VOR 200 DME.

CLARK ONE DEPARTURE: At 500 ft, turn left heading 180° to intercept the AA VOR R-200 to 10 DME. Maintain 3000 ft. Then proceed on assigned route or as directed by ATC.

PIHA ONE DEPARTURE: At 500 ft, turn right heading 280° to intercept the AA VOR R-261 to 10 DME. Maintain 3000 ft. Then proceed on assigned route or as directed by ATC.